


HeadMaster Switch Wiring



Part No:	White	Black
	09056	09005

Dimensions

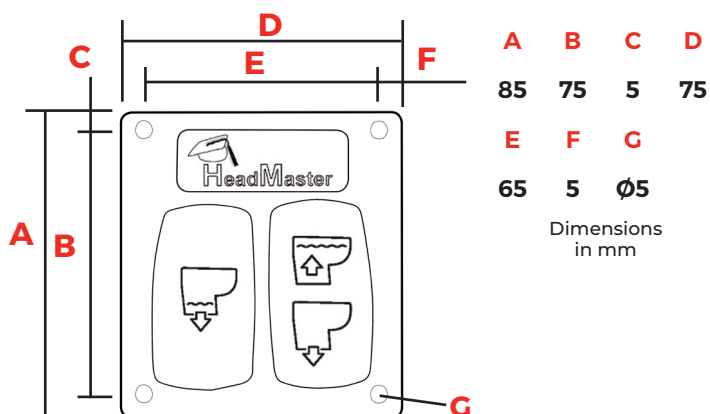

Operation

ADDING WATER TO TOILET BOWL

Press “Add Water” switch **1** and hold until desired water level is achieved. (Do not press “Add Water” switch too long or overflow may occur). More water is usually added only when flushing solids.

Flushing The Toilet

Press “Flush” switch **2** down and hold for a few seconds after waste drains from toilet bowl (about five seconds). This switch activates the macerator pump that siphons water and waste from the bowl, macerates, and propels the effluent through the discharge hose. To use less water for liquid-only flushes, press “Flush” switch for shorter period of time.

“Dry Bowl” Operation

During periods of travel at sea, water in a toilet bowl can splash out and into the toilet area. To avoid this press the “Dry Bowl” switch **3** to drain water completely from toilet bowl. Water is not added to bowl during or after pressing the “Dry Bowl” switch.

Wiring Diagram

